



- 25. 측면음향반사판 4 (# 4 ACOUSTICAL SHELL - SIDE WALL)
- 24. 측면음향반사판 3 (# 3 ACOUSTICAL SHELL - SIDE WALL)
- 23. 측면음향반사판 2 (# 2 ACOUSTICAL SHELL - SIDE WALL)
- 22. 측면음향반사판 1 (# 1 ACOUSTICAL SHELL - SIDE WALL)
- 21. 하늘막 (CYCLORAMA)
- 20. 장치봉 8 (# 8 SET BATTEN)
- 19. 장치봉 7 (# 7 SET BATTEN)
- 18. 후면음향반사판 (ACOUSTICAL SHELL - BACK WALL)
- 17. 하늘막상단조명 + 머리막 (SKY CYC. LIGHT + HOUSE BORDER)
- 16. 끝막 3 (# 3 DRAW CURTAIN)
- 15. 조명봉 3 (# 3 LIGHT BATTEN)
- 14. 천장음향반사판 2 (# 2 ACOUSTICAL SHELL - CEILING)
- 13. 장치봉 6 (# 6 SET BATTEN)
- 12. 장치봉 5 (# 5 SET BATTEN)
- 11. 장치봉 4 (# 4 SET BATTEN)
- 10. 조명봉 2 (# 2 LIGHT BATTEN)
- 09. 장치봉 3 (# 3 SET BATTEN)
- 08. 끝막 2 (# 2 DRAW CURTAIN)
- 07. 장치봉 2 (# 2 SET BATTEN)
- 06. 천장음향반사판 1 (# 1 ACOUSTICAL SHELL - CEILING)
- 05. 조명봉 1 (# 1 LIGHT BATTEN)
- 04. 장치봉 1 (# 1 SET BATTEN)
- 03. 영사막 (SCREEN)
- 02. 끝막 1 (# 1 DRAW CURTAIN)
- 01. 모양막 (CONTOUR CURTAIN)
- 00. 영점선 (ZERO LINE)
- 01. 앞무대조명 (APRON LIGHT)
- 02. 현수막봉 (PLACARD BATTEN)